

## QUICK-LOCK Adapterplatte für KRAUSER-Koffer QUICK-LOCK Adapter Plate for KRAUSER-Cases

### Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTEC gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	4,5 Nm
M8	8,0 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

SW-MOTEC GmbH & Co. KG  
Bahnhofstrasse 44d  
35282 Rauschenberg  
-Germany-

Tel.: ++ 49 (0) 6425 816 800  
Fax: ++ 49 (0) 6425 816 810

www.sw-motech.com

### Mounting Instructions









SW-MOTEC products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW Motech takes no responsibility for damages caused by improper installation.


All screws, bolts and nuts, including all replacement hardware provided by SW-MOTEC, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M6	4,5 Nm
M8	8,0 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts and nuts.

<p>1 Adapterplatte Adapter Plate</p>  <p>GPT.00.152.044 oo</p> <p>Anzahl/ Pcs. 1</p>	<p>6 Innensechskantschraube mit flachem Kopf Hexagon Socket Screw with low Head</p>  <p>M8 x 30 DIN 6912</p> <p>Anzahl/ Pcs. 4</p>	
<p>2 Schnellverschluss Quick Fastener</p>  <p>CAM.00.50E8-17Z</p> <p>Anzahl/ Pcs. 3</p>	<p>4 Haltenocken Cam-Lock</p>  <p>CAM.00.V50R3-1-1AF</p> <p>Anzahl/ Pcs. 3</p>	<p>7 Distanzbuchse Spacer</p>  <p>Da:18 Di:8,5 h:7</p> <p>Anzahl/ Pcs. 4</p>
<p>3 Sicherungsring Retaining Ring</p>  <p>CAM.50E2-3BP</p> <p>Anzahl/ Pcs. 3</p>	<p>5 Gewindefurchende Schraube Self Tapping Screw</p>  <p>M3 x 6 GEFU</p> <p>Anzahl/ Pcs. 6</p>	<p>8 Mutter, selbstsichernd Lock Nut</p>  <p>M8 DIN 985</p> <p>Anzahl/ Pcs. 4</p>

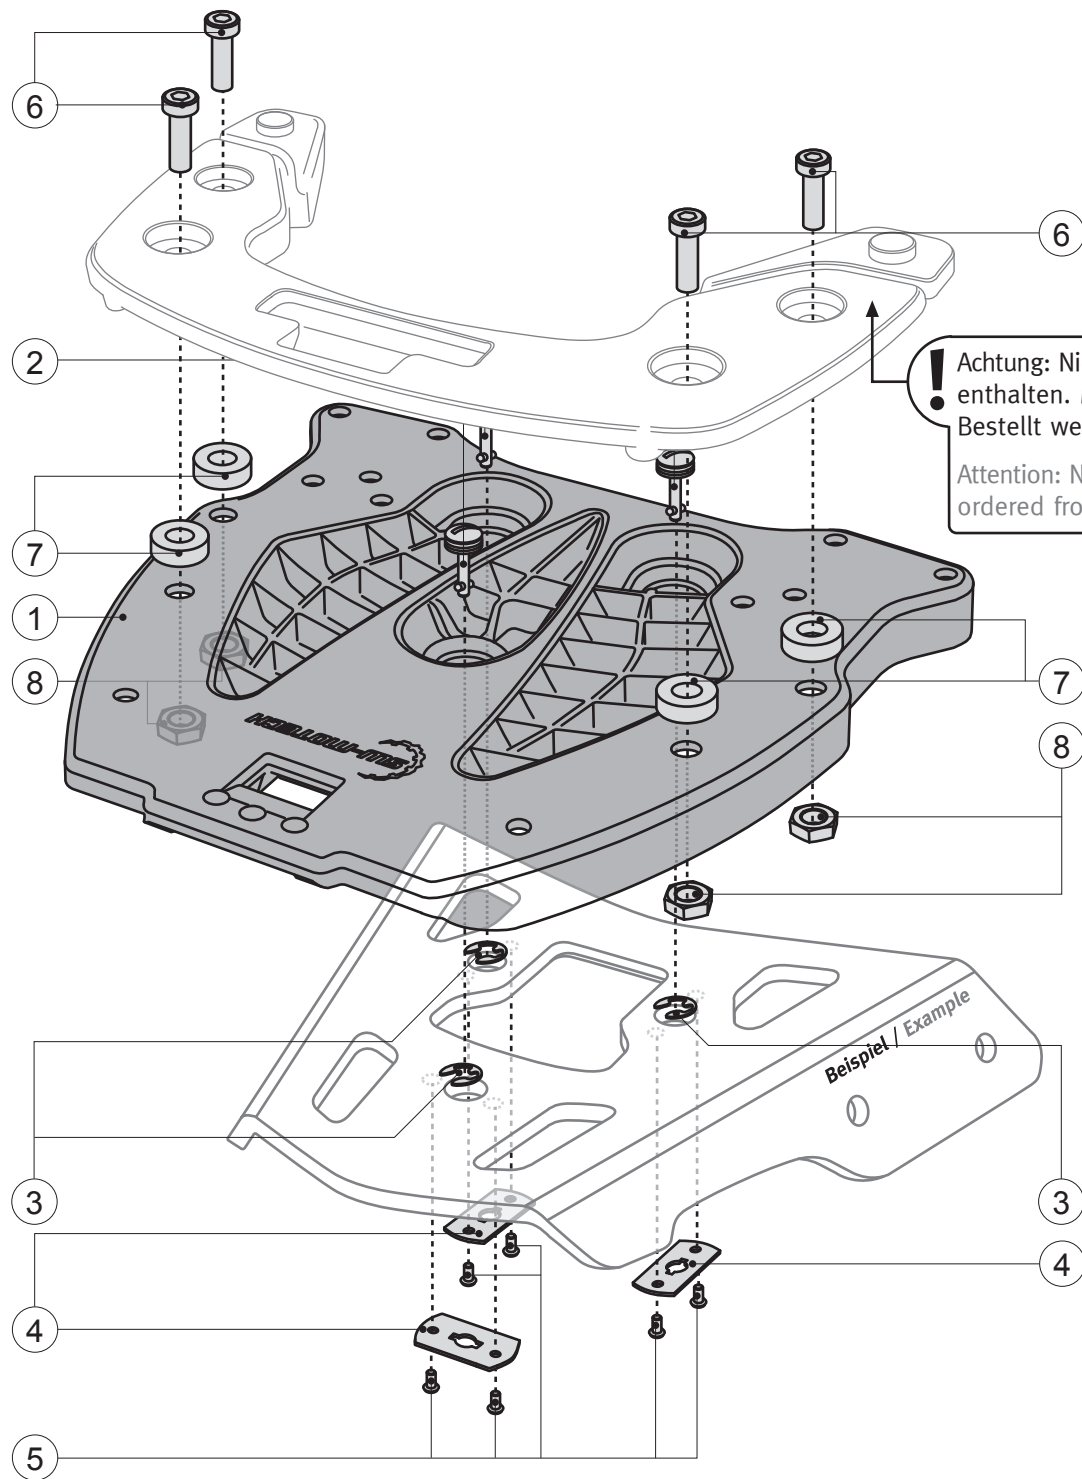

**!** Achtung: Nicht im Lieferumfang enthalten. Muss von KRAUSER Bestellt werden.  
Attention: Not included. Must be ordered from KRAUSER.