


GPT.08.273.100 Revision: 00

ALU-RACK Kawasaki ZRX 1200

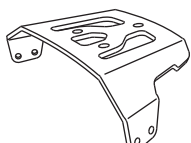

**1** ALU-RACK




schwarz/silber  
GPT.08.273.001 05  
Anzahl/ Pcs. 1

**4** Zylinderschraube mit Innensechskant  
Hexagon Socket Screw




silber/silber  
M8 x 70 DIN 912  
Anzahl/ Pcs. 2

**8** Senkkopfschraube  
Countersunk Screw




schwarz/silber  
M8 x 70 DIN 7991  
Anzahl/ Pcs. 2

**2** Haltegriff  
Handle Bar




GPT.08.273.910 L/R  
Anzahl/ Pcs. 2

**5** Mutter mit Bund  
Lock Nut




schwarz/black  
M 8 DIN 6927  
Anzahl/ Pcs. 8

**3** Rahmenendkappen  
Plastic Cap




KES.00.15.02/B  
Anzahl/ Pcs. 2

**6** Unterlegscheibe  
Washer




A 8,4 DIN 125  
Anzahl/ Pcs. 2

**9** Linsenschraube  
Lenshead Screw




schwarz/silber  
M8 x 35 ISO 7380  
Anzahl/ Pcs. 4

**7** Distanzbuchse  
Spacer

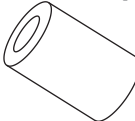

Da:18 Di:13 h:45  
Anzahl/ Pcs. 4

**10** Distanzbuchse  
Spacer



Da:18 Di:8,4 h:15  
Anzahl/ Pcs. 4

## Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50km alle Verbindungen auf festen Sitz.

Max. Zuladung 7,5 Kg inklusive Koffer und Adapter. Ist das Zuladungsgewicht des Fahrzeuges durch den Hersteller limitiert, gelten diese Grenzwerte.

## Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW-MOTECH takes no responsibility for damages caused by improper installation.

All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts and nuts.

Max. Load On Rear Carrier: 7,5 Kg (16,5 lbs) inclusive case and adapter or the motorcycle manufacturer's weight limit, whichever is less.

**!** Achtung: Falls die Montage einer Adapterplatte vorgesehen ist, MÜSSEN die Haltenocken am Alu-Rack vor dessen Anbau am Motorrad verschraubt werden.

Attention: Cam-locks from adapter kit MUST be installed before attaching the alu-rack to the bike.

SW-MOTECH GmbH & Co. KG  
Bahnhofstrasse 44d  
35282 Rauschenberg  
-Germany-

Tel.: ++ 49 (0) 6425 816 800  
Fax: ++ 49 (0) 6425 816 810

www.sw-motech.com

GPT.08.273.100

